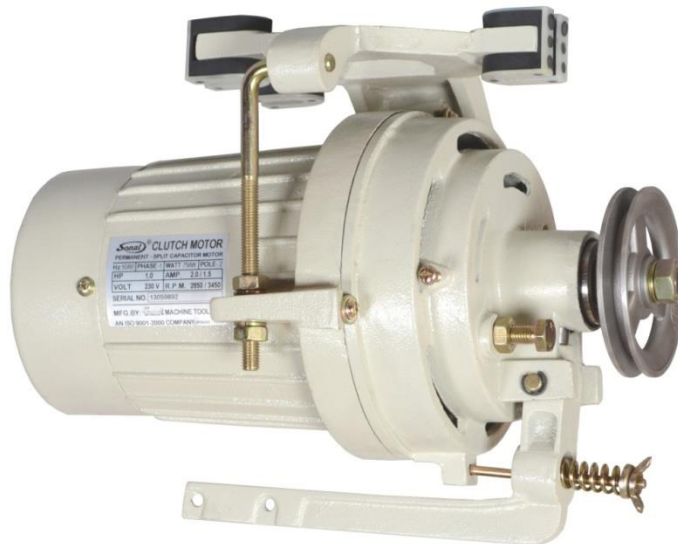 




INTER CLUTCH MOTORS PARTS

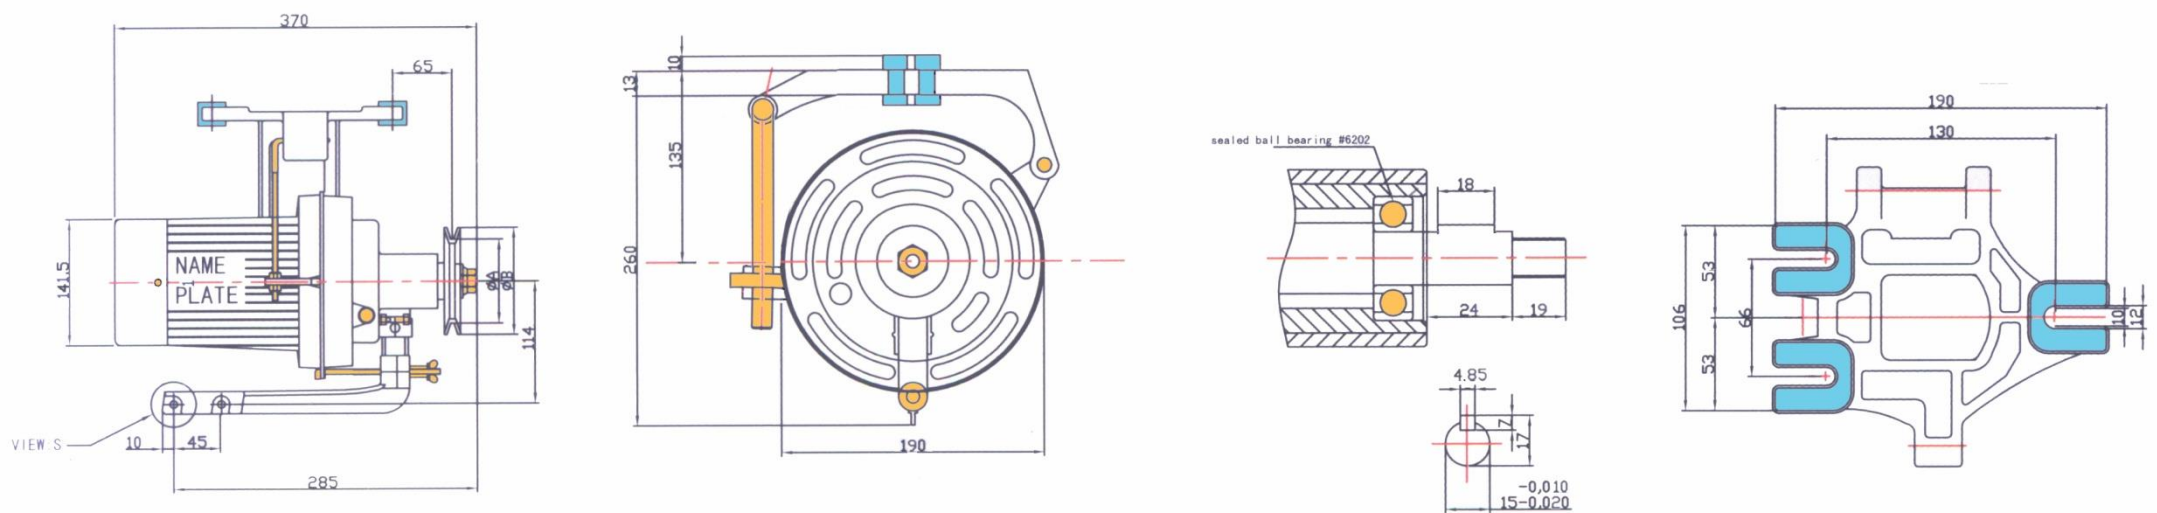 
Industrial Sewing Machine Clutch Motor



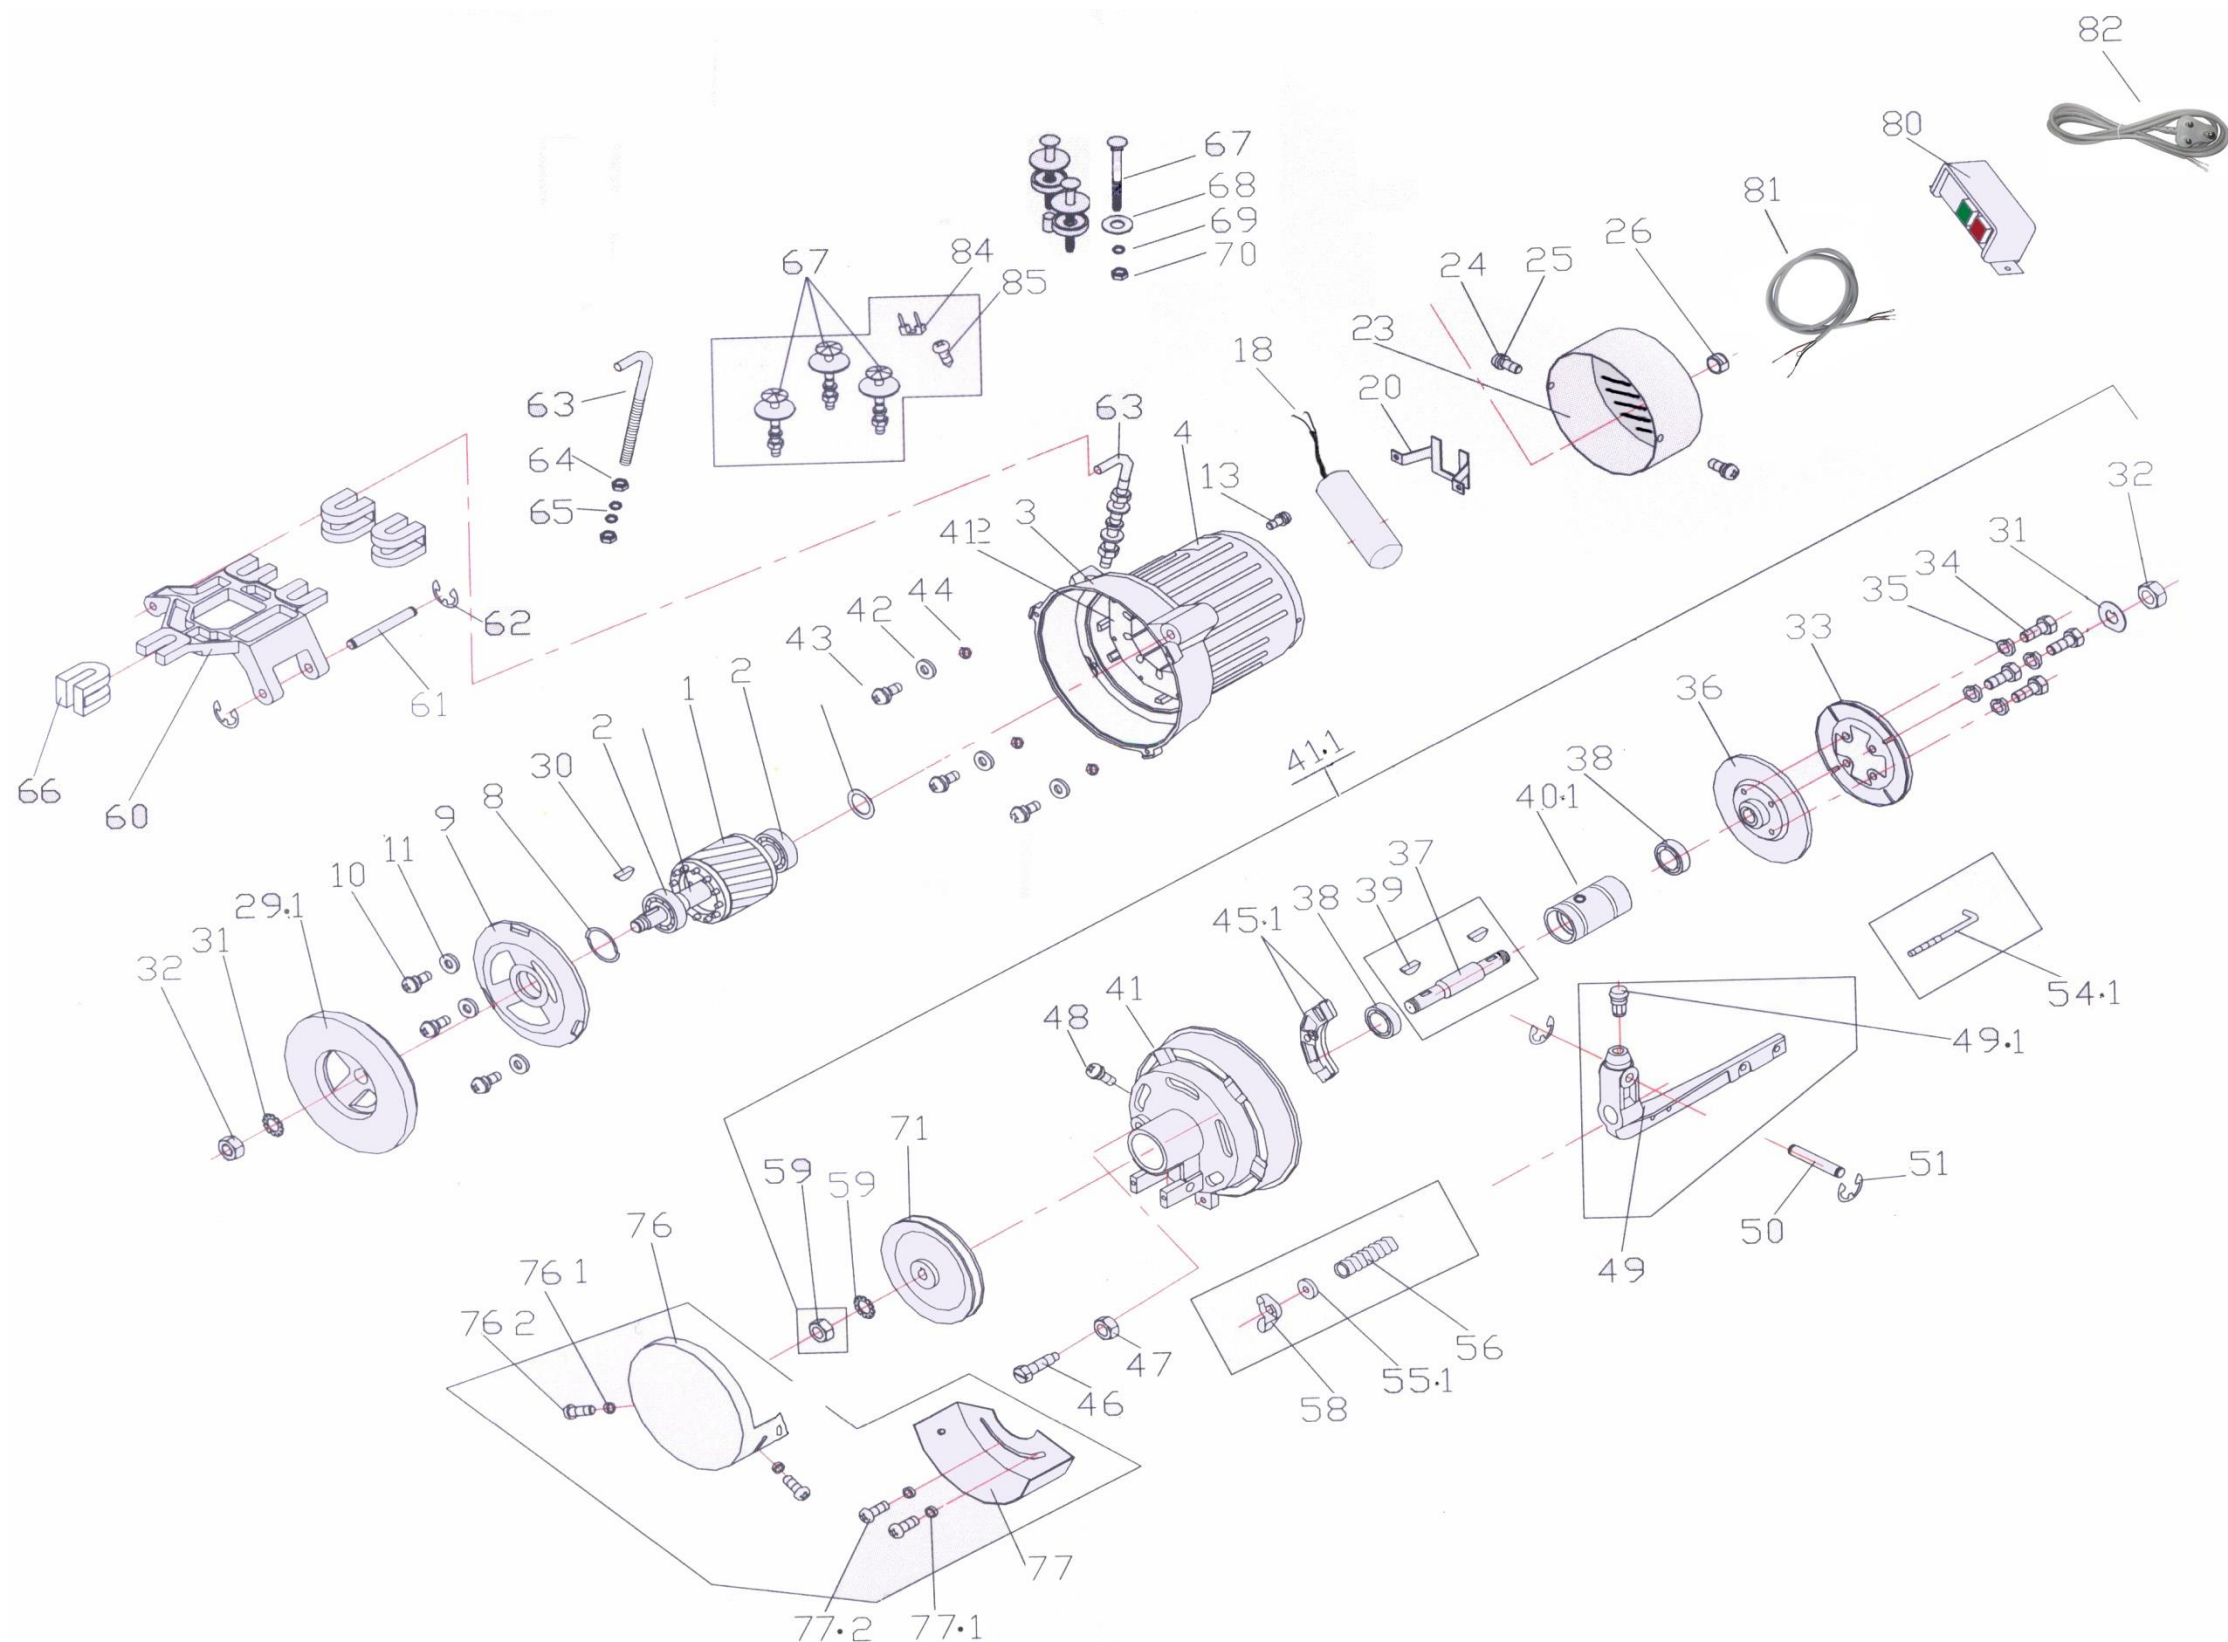 
High Performance Clutch Motor



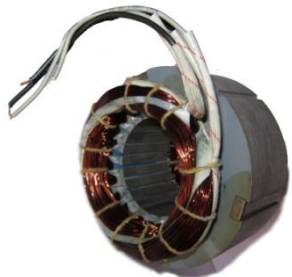 
EXTERNAL DIMENSION:(400W/600W/750W)



 
STRUCTURE DIAGRAM:

 
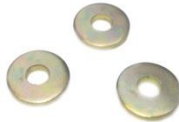 


INTER CLUTCH MOTOR PARTS LIST:

PART NO.	PARTS NAME	QTY.	Typical View
01	Rotor	01	
02	Ball Bearing (6203)	02	
03	Frame	01	
08	Wave Washer	01	
09	Centre Bracket	01	
10	Set Screw for No.9	03	
11	Washer for No.9	03	
12	Stator	01	

13	Set Screw for Earth	01	
18	Capacitor	01	
20	Capacitor Band	01	
21	Set Screw for No.20	01	
23	End Cover	01	
24	Set Screw for No.23	02	
25	Washer for No.23	02	
26	Rubber Grummet	01	

29.1	Fly Wheel	01	
30	Woodruff Key for No.29-1	01	
31	Washer for No.29.1 , 36-3	01	
32	Hexagonal Nut for No.29-1 , 36-3	01	
33	Clutch Lining	01	
34.1	Set Screw for No.33	04	
35	Spring Washer for No.33-1	04	
36	Clutch Plate	01	
37	Clutch Shaft	01	

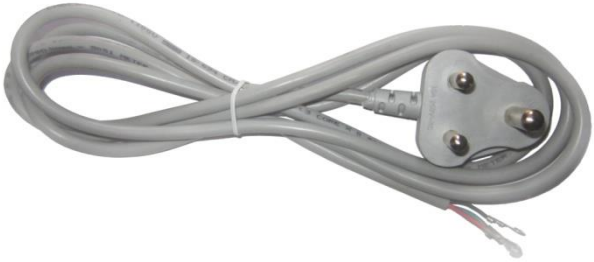 
37.1	Clutch Shaft Sat	01	
38	Ball Bearing (6202)	02	
39	Woodruff Key for No.37	02	
40.1	Clutch Adjusting Sleeve	01	
41	Pulley Side End Bracket	01	
41.1	Pulley Side End Bracket Assemble Sat.	01	
42	Clutch End Cover Retaine	03	

43	Set Screw for No.41-1	03	
44	Spring Washer for No.41-1	03	
45.1	Brake Shoe	01	
46	Brake Adjusting Screw	01	
47	Nut for 45-1	01	
48	Set Screw for No.45-1	01	
49.1	Clutch Lever with clutch Point	01	
50.1	Lever Pin	01	
51	Stop Ring for 50-1	02	

54 S	Lever Adjusting Screw Sat	01	
54.1	Lever Adjusting Screw	01	
55.1	Washer for No.54-1	01	
56	Spring for No 54-1	01	
58	Wing Nut for No.54-1	01	
59	Pulley Lock Nut	01	
59.1	Spring Washer for No.59	01	
60	Slide Base	01	

61	Base Pin	01	
62	Stop Ring for No.61	02	
63S	Belt Adjusting Bolt Sat	01	
63	Belt Adjusting Bolt	01	
64	Nut for No.63	02	
65	Spring Washer for No.63	02	
66	Vibrating Absorbing Rubber	03	
67	Motor Set Screw	03	

67S	Motor set Screw sat (Washer , Nut)	03	
68	Plain Washer for No.67	03	
69	Spring Washer for No.67	03	
70	Nut for No.67	03	
71	Pulley Available size:- 35,55,65,75,85,100,110,120	01	
76	Pulley Cover(Outer)	01	
76.1	Set Screw for No.76	02	
76.2	Spring Washer for No.76	02	

77	Pulley Cover(Inner)	01	
77.1	Set Screw for No.77	02	
77.2	Spring Washer for No.77	02	
80	Push Button Switch Only	01	
81	Power Cord wire		
82	Power Cord wire With 16 Amp. Molding Plug	01	
84	PVC "C" Clamp	04	

85	Wooden Screw	02	
----	--------------	----	---

Sonal Machine Tools

Admin office / works:
30/30 Adeshwar Estate opp. Shankar Estate,
Revabhai Estate Road, C.T.M. , Amraiwadi
Ahmedabad - 380026
(Gujarat-India)
Tel: 079-25860485, 25860290
Fax: 079-25860485
Mobile: +919898278390
Email: sonalindia@rediffmail.com
Website: sonal-motors.com

Authorised Dealer :

